



# IGNITE®

## GETTING STARTED

### HELLO

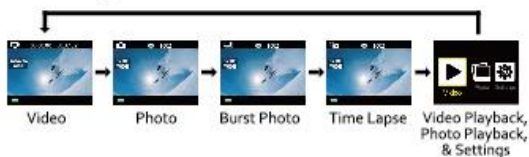
Congratulations on your new camera! This user manual will help you learn the basics of capturing life's most incredible moments!







**To power ON:**  
Press the **Power/Mode Button**.

**To power OFF:**  
Press and hold the **Power/Mode Button**.

### OVERVIEW

Turn camera ON and repeatedly press the **Power/Mode Button** to cycle through camera modes and settings. The modes will appear in following order:



 Video	Record Video
 Photo	Capture a single photo.
 Burst Photo	Capture photo bursts
 Time Lapse	Shoot a series of photos at set time intervals
 Video & Photo playback	Video & Photo playback
 Settings	Adjust camera settings, resolution and more.

## SETTINGS



Press the **Shutter/Select Button** to enter the settings menu. Repeatedly press the **Power/Mode Button** to cycle through options and press the **Shutter/Select Button** to select desired option. To go back to the previous screen or exit the settings menu, press the **Wi-Fi Button**.

**Video Resolution:**

4K25/2.7K30/1080p60/1080p30

MicroSD Card	4k25/2.7k30	1080p60	1080p30
32 GB	60 mins	120 mins	240 mins
16 GB	30 mins	60 mins	120 mins

**Looping Video:** Off/On (4K & 2.7K not supported)**Time Stamp:** Off/Date/Date & Time**Exposure:** +-2.0/+-.1.7/+-.1.3/+-.1.0/+-.0.7/+-.0.3/0**Photo Resolution:** 12M/8M/5M/4M**Burst Photo:** 3 Photos**Time Lapse:** 2s/3s/5s/10s/20s/30s/60s**Continuous Lapse:** Off/On**Power Frequency:** 50Hz/60Hz/Auto**Language:** English/Traditional Chinese  
/Italian/Spanish/Portuguese/German/  
Dutch/France/Czech/Polish/Turkish/  
Russian/Japanese/Korean/Thai**Date & Time:** MM/DD/YY, DD/MM/YY,  
or YY/MM/DD**Sound Indicator:** Shutter On/Off, Start Up 1/2/3/  
None, Beep On/Off, Volume  
0/1/2/3**Upside Down:** On/Off**Screen Saver:** Off/1 min/3 min/5 min**Power Saver:** Off/1 min/3 min/5 min**Format:** No/Yes**Reset:** No/Yes**Version**

---

**VIDEO MODE**

---

 **Video**

To record Video, verify the camera is in **Video** mode. If the **Video** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

**To start recording:**

Press the **Shutter/Select Button**. The camera will emit one beep and the **Camera Status Lights** will flash while recording.

**To stop recording:**

Press the **Shutter/Select Button**. The **Camera Status Lights** stop flashing and the camera emits one beep to indicate recording has stopped.

This camera automatically stops recording when the battery is out of power. Your **Video** will be saved before the camera powers **OFF**.

---

**PHOTO MODE**

---

 **Photo**

To capture a **Photo**, verify the camera is in **Photo** mode. If the **Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

**To take a photo:**

Press the **Shutter/Select Button**. The camera will emit the camera shutter sound.

---

**BURST PHOTO MODE**

---

 **Burst Photo**

To capture a **Burst Photo** series, verify the camera is in **Burst Photo** mode. If the **Burst Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Burst Photo** mode, your camera takes 3 photos in 1.5 seconds.

**To take a Burst Photo series:**

Press the **Shutter/Select Button**. The camera will emit camera shutter sounds.

---

**TIME LAPSE MODE**

---

 **Time Lapse**

To capture a **Time Lapse** series, verify the **Continuous Lapse** is **ON** and camera is in **Time Lapse** mode. If the **Time Lapse** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Time Lapse** mode, your camera captures a series of photos at **2,3,5,10,20,30** or **60** second intervals.

**To take Time Lapse:**

Press the **Shutter/Select Button**. The camera initiates countdown and emits the camera shutter sound each time a **Photo** is taken.

---

## PLAYBACK

---

### Playing Back Videos and Photos

#### To enter the Playback menu:

1. Press the **Power/Mode Button** to select **Video** or **Photo**.
2. Press the **Shutter/Select Button** to enter the **Playback** menu.
3. Use **Power/Mode Button** to cycle through the various options.
4. Press the **Shutter/Select Button**.
5. To return to the **Playback menu**, press the **Wi-Fi Button**.

---

## STORAGE/MICROSD CARDS

---

This camera is compatible with **16GB** and **32GB** capacity **microSD**, **microSDHC**, and **microSDXC** memory cards. You must use a **microSD** card with at least a **Class 10 speed** rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

---

## BATTERY

---

### Charging The Battery

To charge the battery:

1. Connect your camera to a USB power supply.

\* Charging Time: 5 hours

---

## CAMERA APP

---

### Connecting to the Ez iCam App (4K & 2.7K not supported)

The **Ez iCam App** lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the **Ez iCam App** to your smartphone or tablet at the **Google Play** or **Apple App Store**.
2. Press the **Power/Mode Button** to power camera **ON**.
3. Make sure the camera is in **Camera modes**.

4. Press the **Wi-Fi Button** to turn on **Wi-Fi\***.
5. In your smartphone or tablet's Wi-Fi settings, connect to the network called "**ICAM-H3**" followed by a series of numbers.
6. Open the **Ez iCam App** on your smartphone or tablet.

\* Press and hold the **Wi-Fi Button** for three seconds to turn **OFF Wi-Fi**.

The **Ez iCam App** is compatible with smartphones and tablets listed below.

#### For Apple iOS

- \* iPhone5, 5s, 6 (Plus), & 6s (Plus) (iOS9)
- \* iPad Air & Mini (iOS9)

#### For Android:

- \* Android 4X Quad-core devices



IOS / Android  
App Download





















---

## COMPATIBILITY

---

\* Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices.

# Accessories

 Waterproof Housing	 Handle Bar/Pole Mount	 Mount 1	 Mount 2	 Mount 3	 Mount 4	 Mount 5
 Mount 6	 Mount 7	 Clip 1	 Clip 2	 Helmet Mounts	 Bandages	 Battery
 Lens Cloth	 Tethers	 Metal Tether	 Protective Backdoor	 USB Cable	 Charger	

## Mounting Your Camera

Attach your camera to helmets, gear and equipment.

